


HOW TO ASSEMBLE THE

#882265

Imported Easels by Jack Richeson & Co., Inc. - Kimberly, WI - Phone: 1-920-738-0744 - www.richesonart.com

7/13

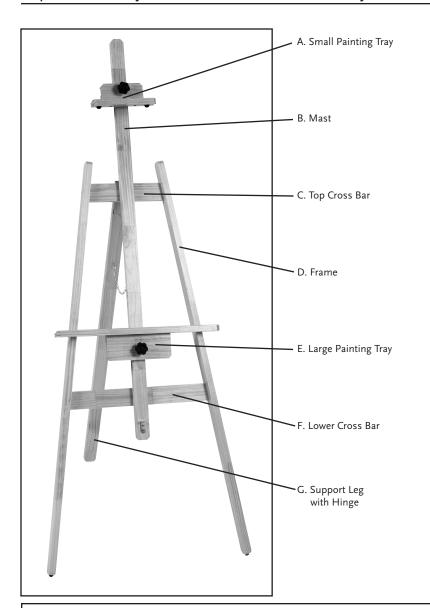


Longest part of mast to narrow

Chain facing up

part of frame.

Step 1


Please open box, take out all pieces and check for damage before beginning assembly.

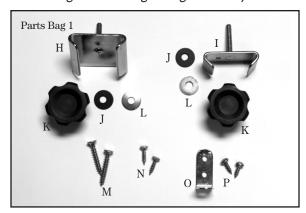

- H. 1 Large metal guide
- I. 1 Small metal guide
- J. 2 Black washers
- K. 2 Black knobs
- L. 2 Metal washers
- M. 2 Long Screws
- N. 2 Short Screws
- O. 1 Tray Stop
- P. 2 Round-headed Screws

Step One:

Attach the Mast (B) to the Easel Frame (D). Lay Mast (B) face down, chain will be facing up. Lay Easel Frame on top of Mast, aligning pre-drilled holes on Mast and Two Cross Bars (C) and (F). Longest part of Mast will be towards the narrow part of the Easel Frame. Attach with the 2 Long Screws (M).

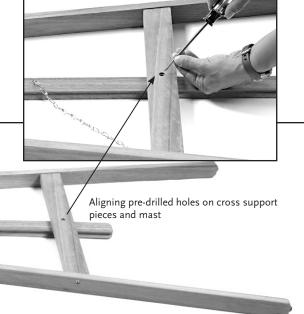




#882265

Imported Easels by Jack Richeson & Co., Inc. - Kimberly, WI - Phone: 1-920-738-0744 - www.richesonart.com

7/13

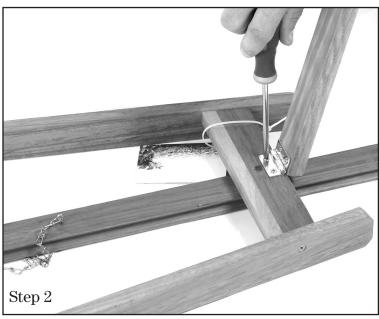


Locate Support Leg (G) with hinge. Align hinge with 2 pre-drilled holes on Top Cross Bar (C). The hook that is attached should face the mast as you attach with 2 of the Short Screws (N).



Step Three:

Stand easel up. Attach chain to small hook for desired easel angle and support.

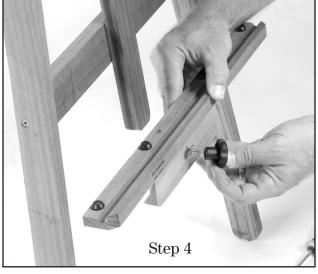

Step Four - Assemble the Painting Trays: Locate 2 metal guides (H & I), 2 black knobs (K), 2 black washers (J) and 2 metal washers (L).

Large (H) metal guide goes with Large painting tray. Small (I) metal Guide goes with Small painting tray.


Assemble paint trays by taking appropriate metal guide and aligning on the back of the appropriate painting tray's pre-drilled hole.

Thread black washer on the bolt and metal guide. Thread through the pre-drilled hole on painting tray (from back to

Thread a metal washer (L) onto the bolt on front of tray, then loosely secure with the black plastic knob(K).

Slide painting tray on to mast, fully tighten black knob when painting tray is in the desired location.

Repeat process for top painting tray.

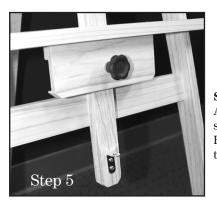

Step 5: Add Tray Stop (O) by securing with 2 Round-Headed Screws (P) to the bottom of the mast.