

Black Pearl




It is highly recommended that you visit
www.fascinations.com/iconx360/icx016
 to see the completed model before assembling your own

ICONX
 3D METAL MODEL KITS


FASCINATIONS, INC.
 Seattle, Washington, USA

ICX016



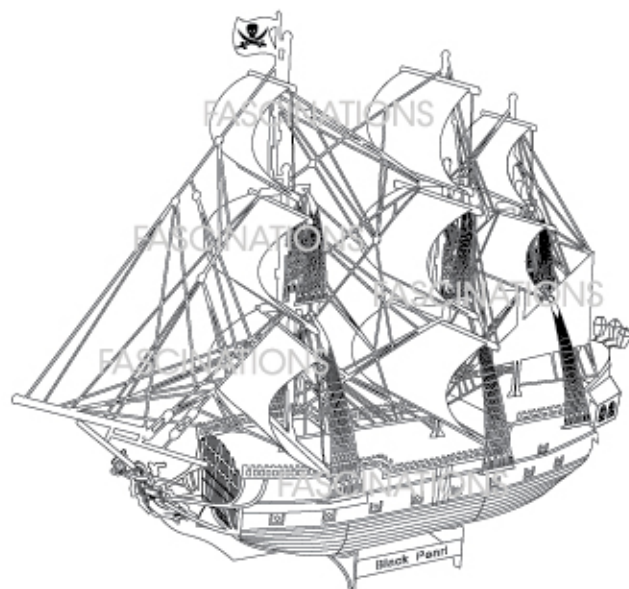


TO CREATE THE BEST CONNECTIONS

● Insert tab into slot and
 bend 90 degrees

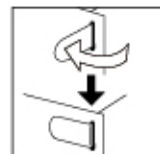


▲ Insert tab into slot and
 twist 90 degrees

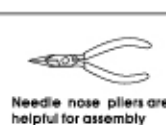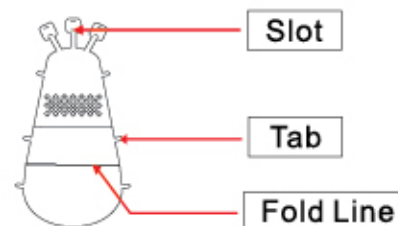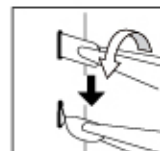

Needle nose pliers are
 helpful for assembly


METAL SHEETS

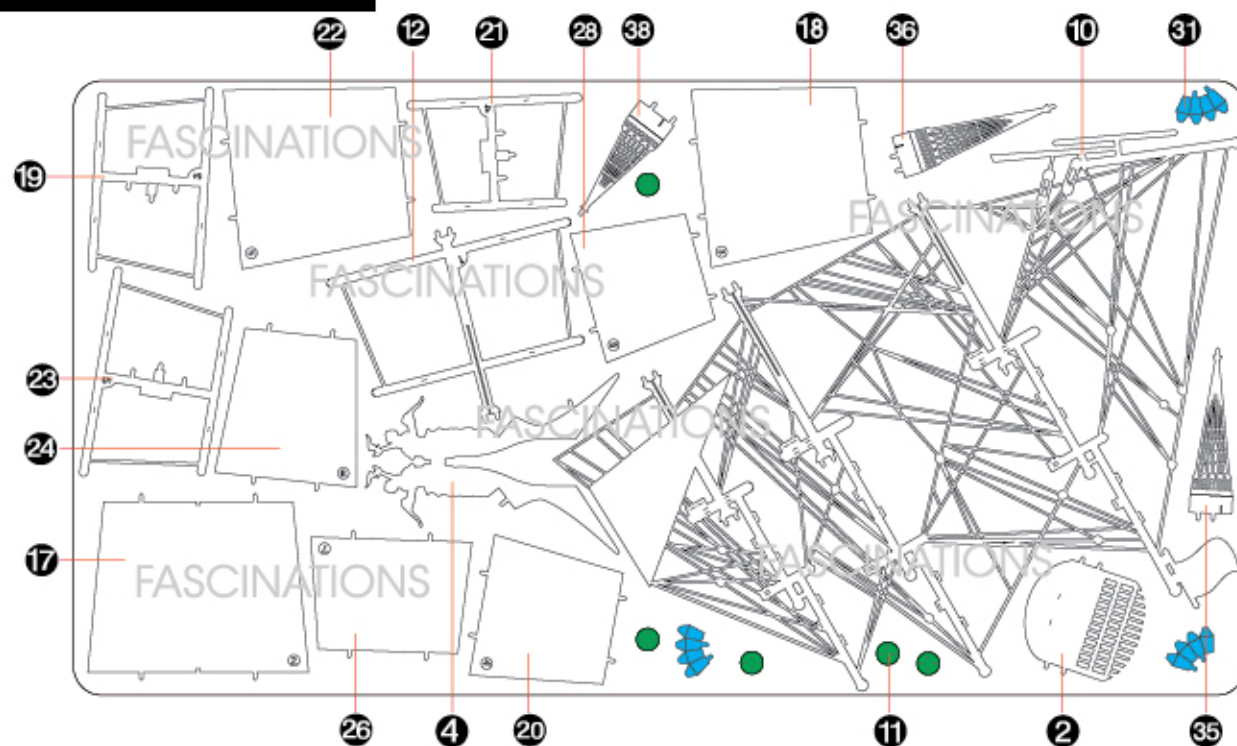

In order to avoid possible injury from sharp edges, please carefully discard
 the metal sheet after parts have been removed.




Go to www.fascinations.com/iconx360/icx016 to see the zoomable PDF version of this instruction sheet

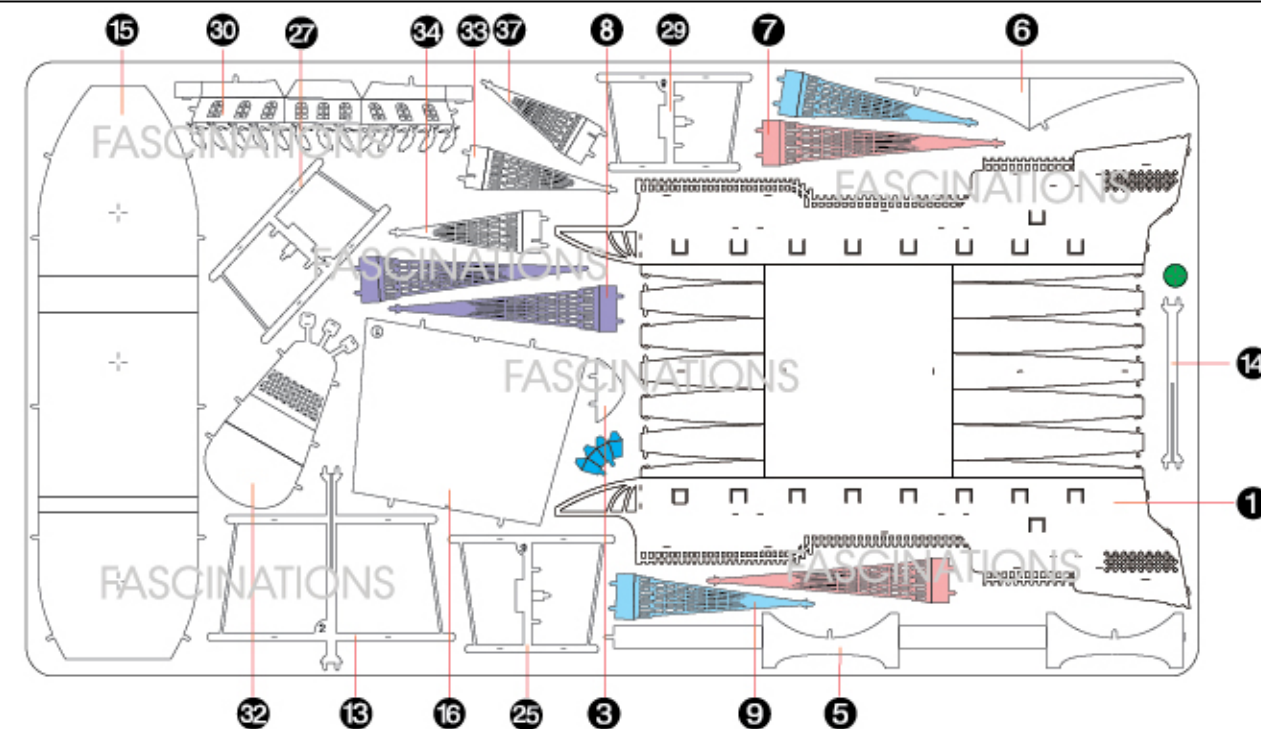


ASSEMBLY STEPS


Step 1










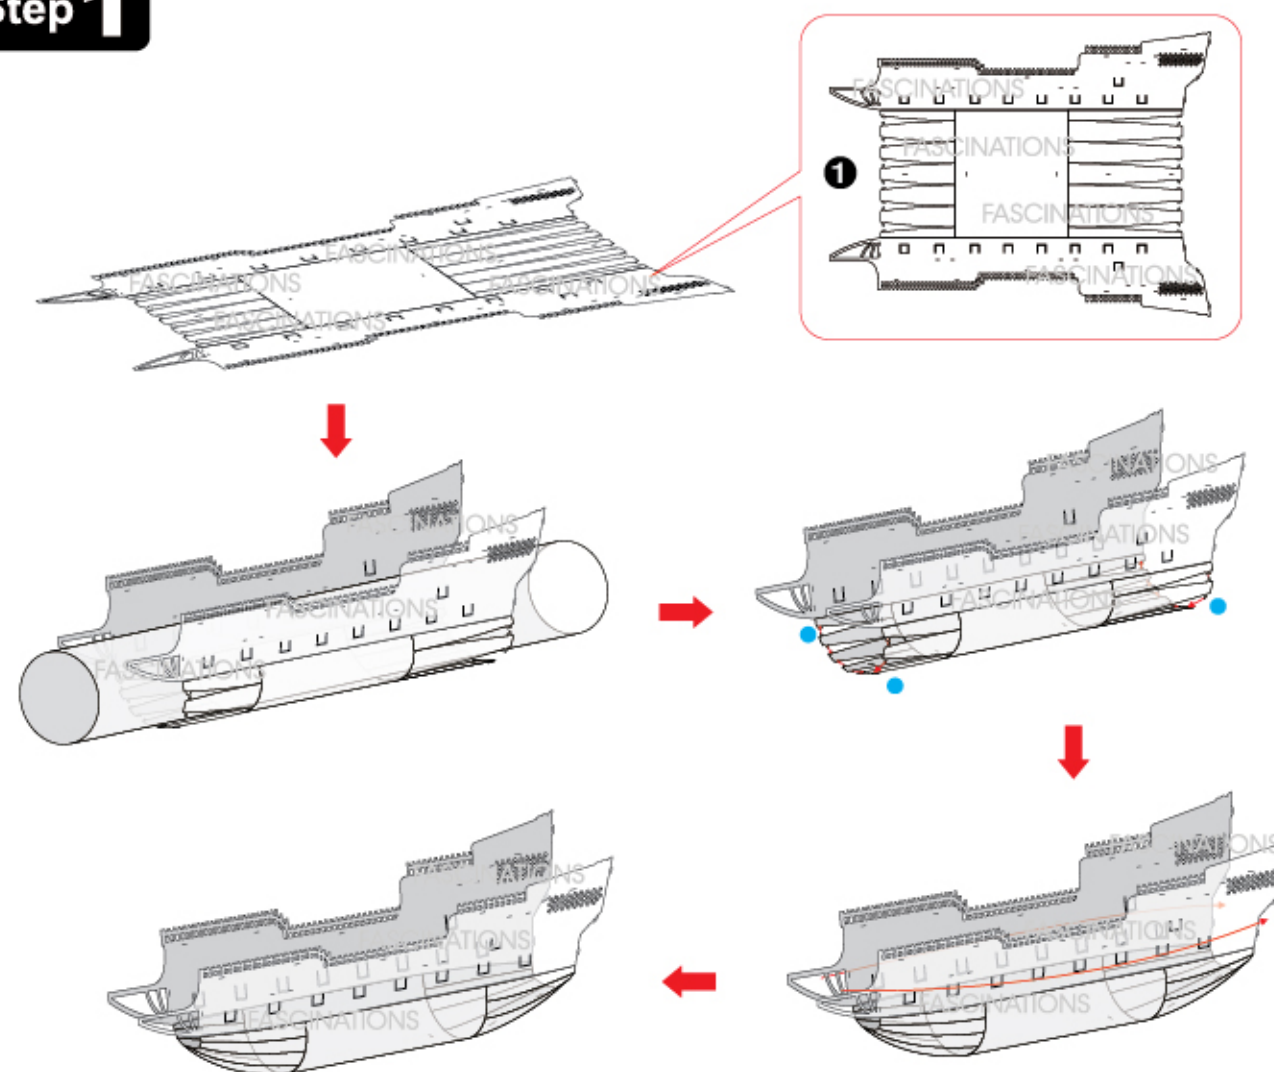


Step 2

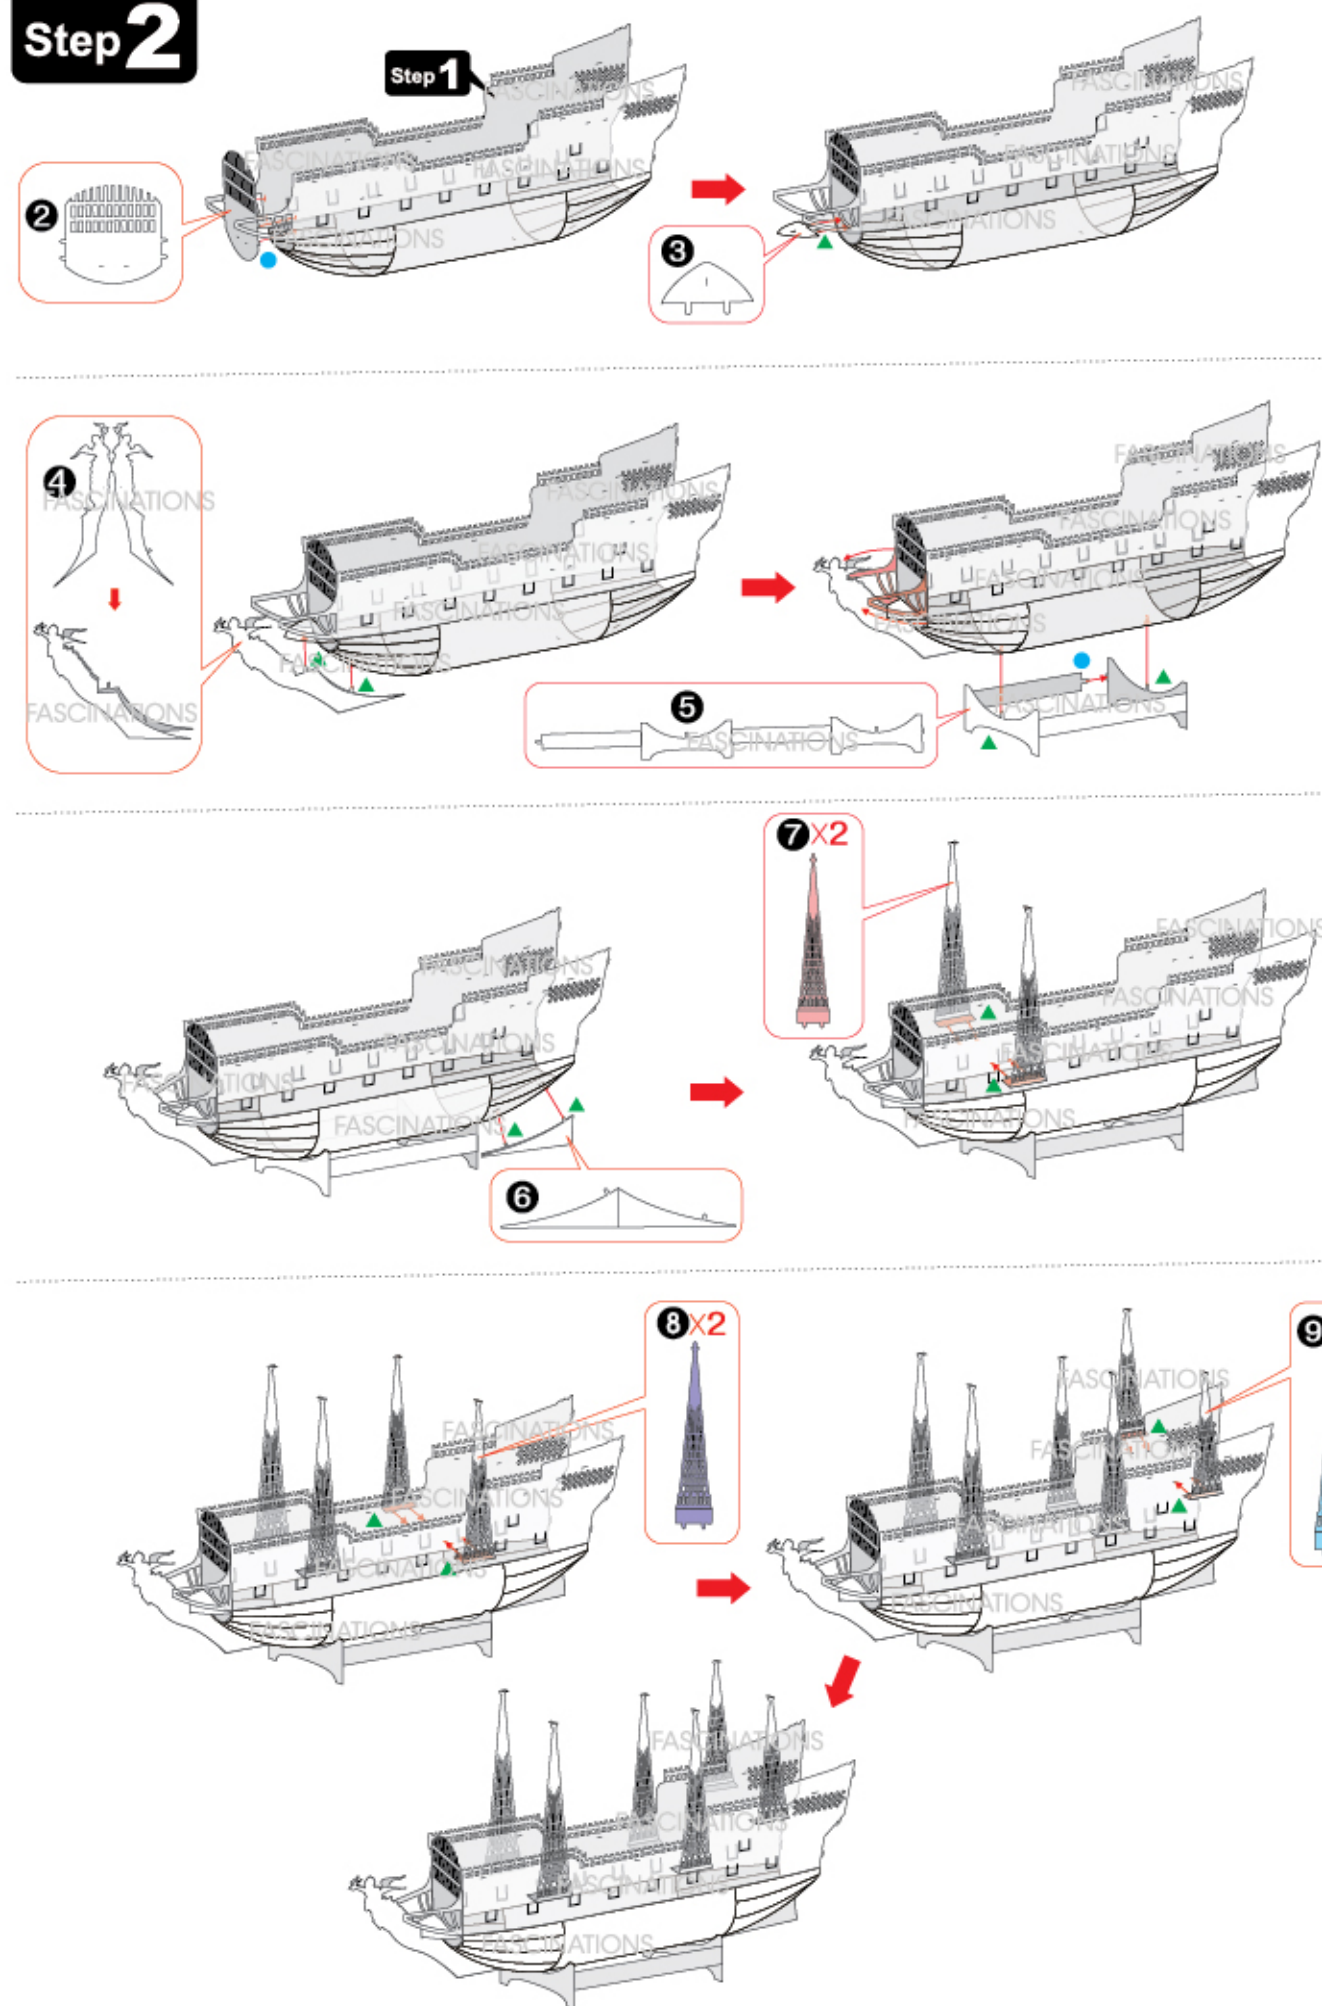


Step 3

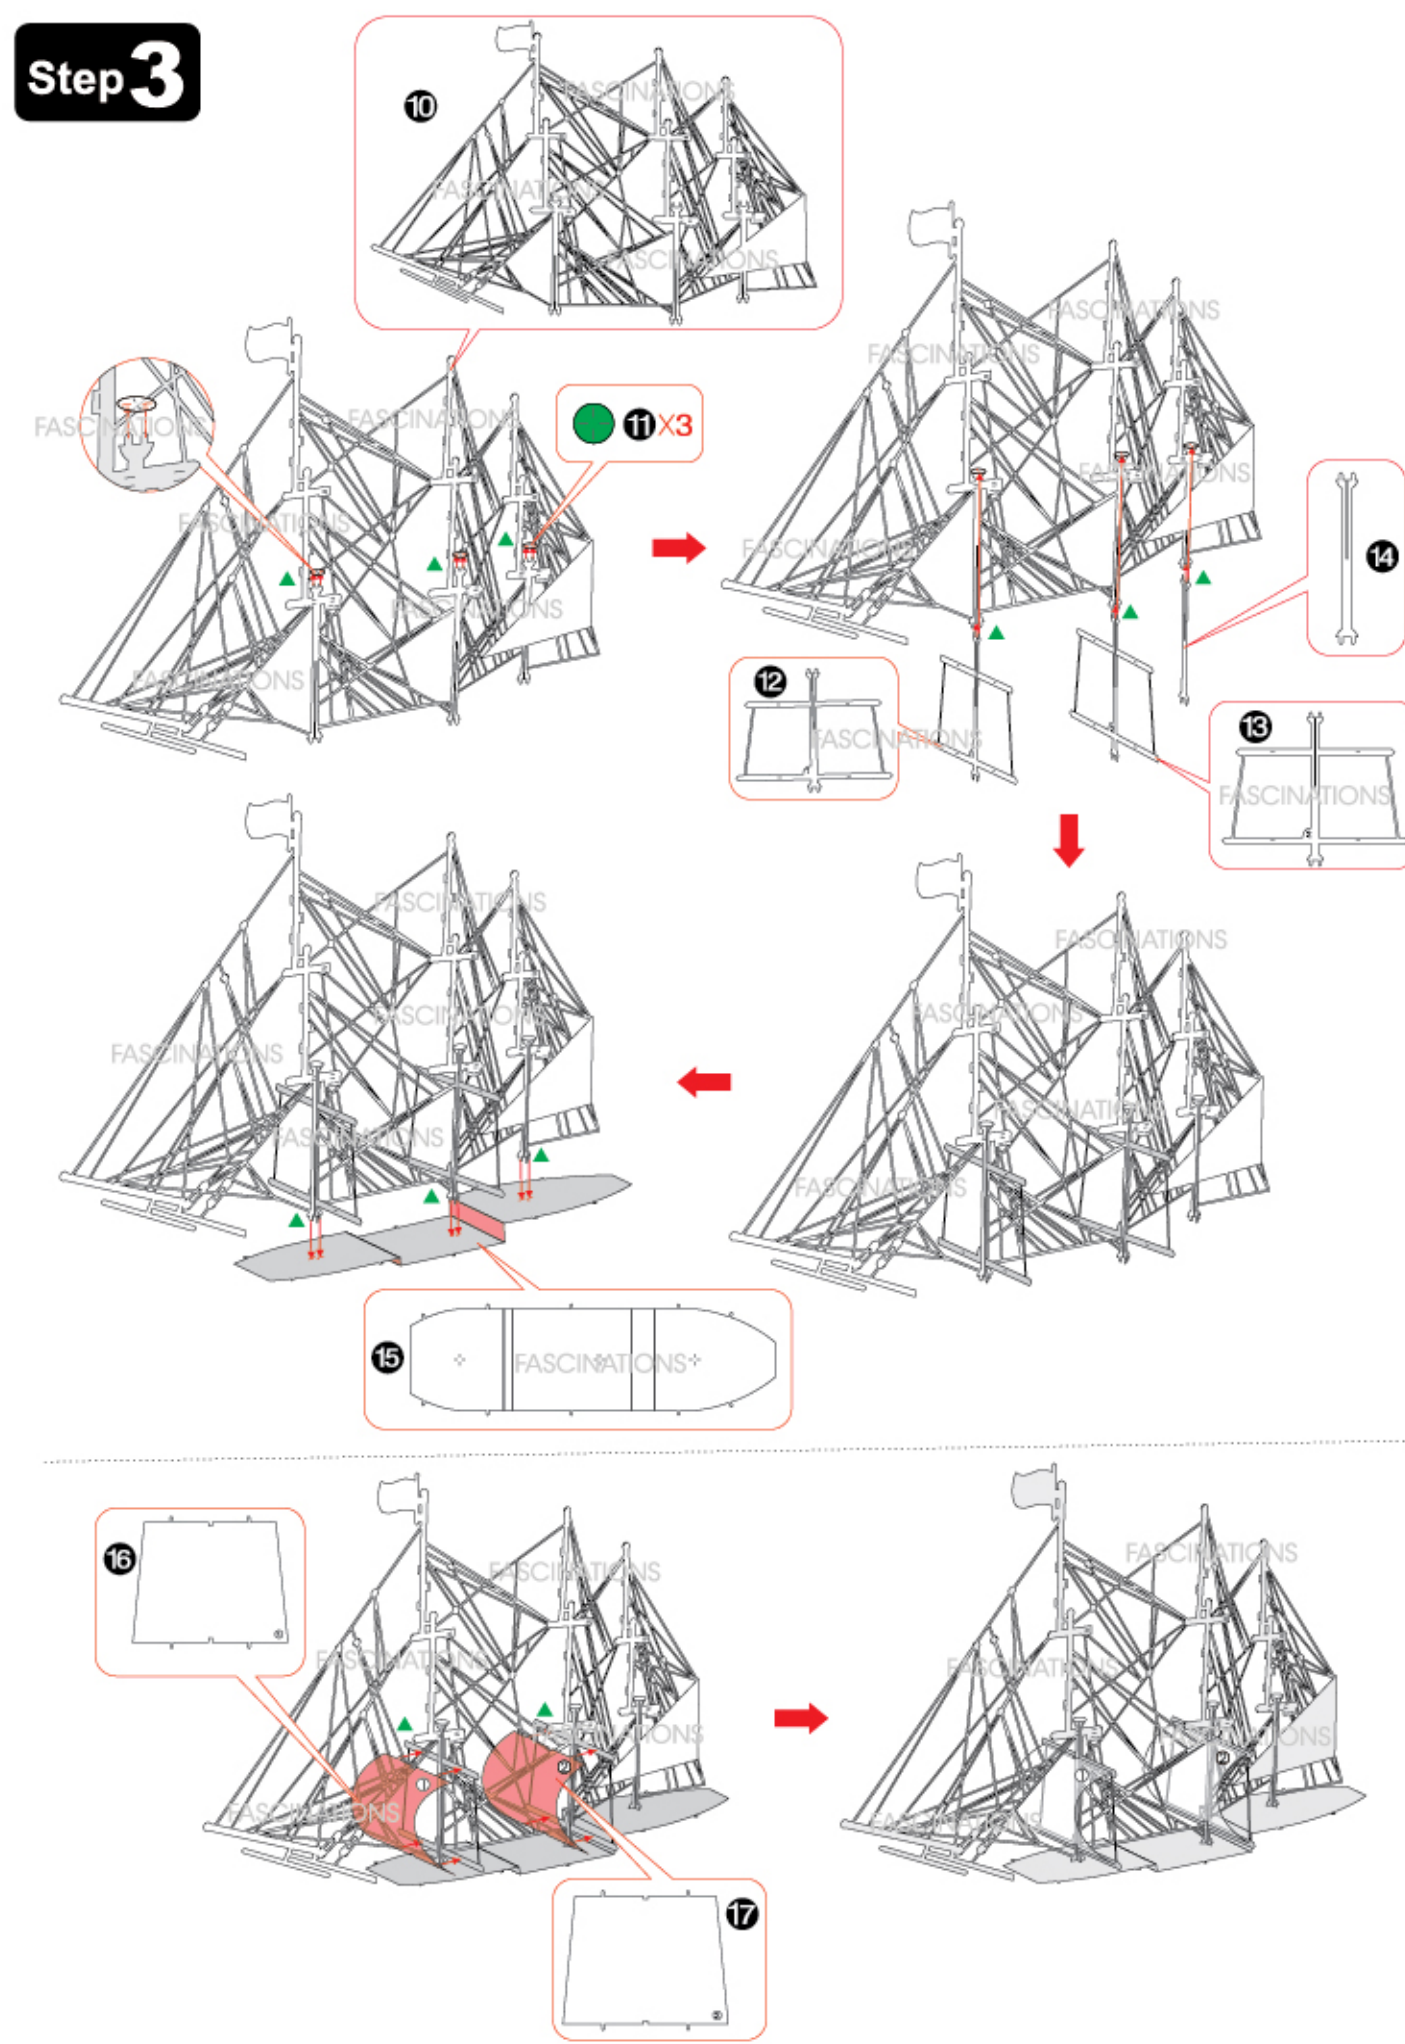


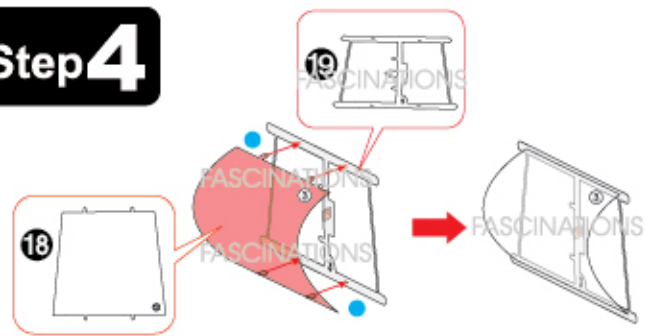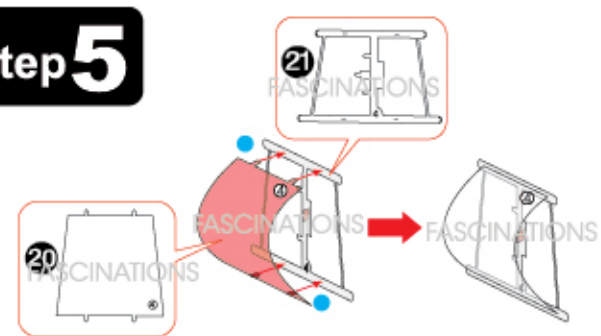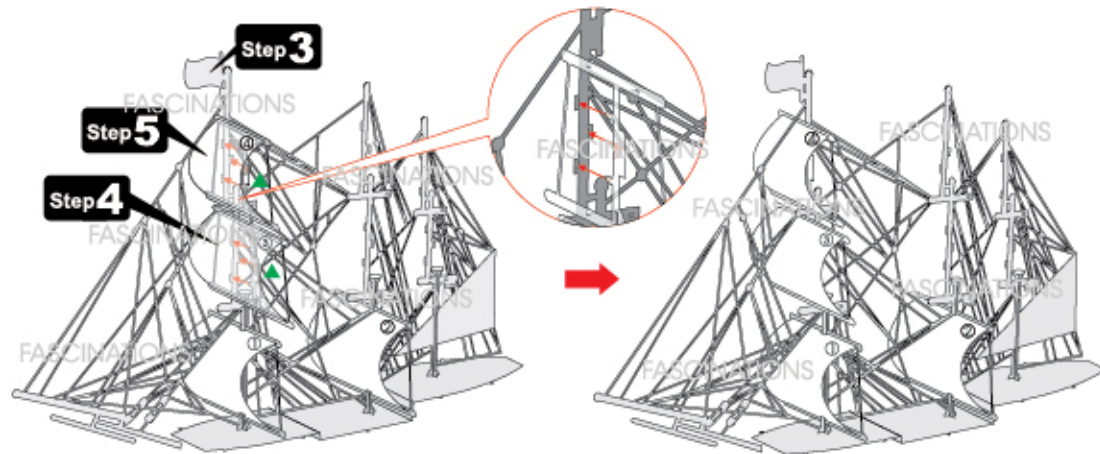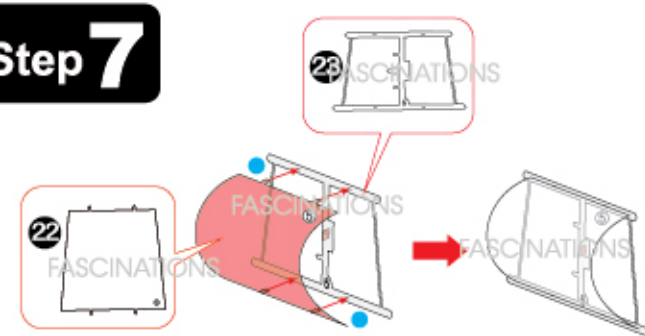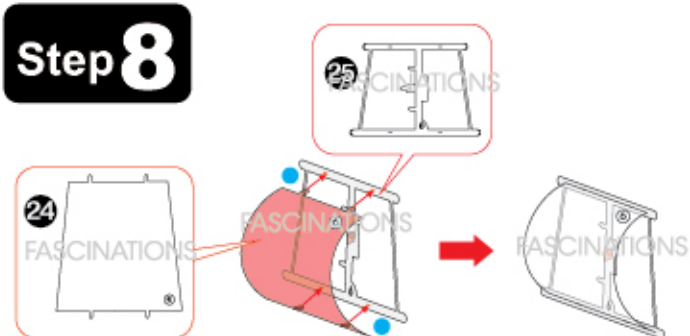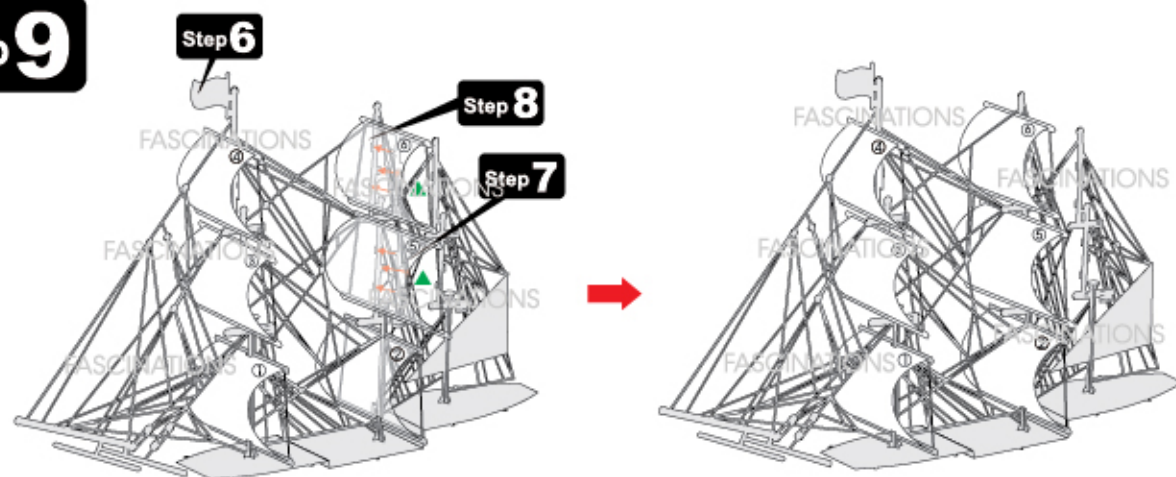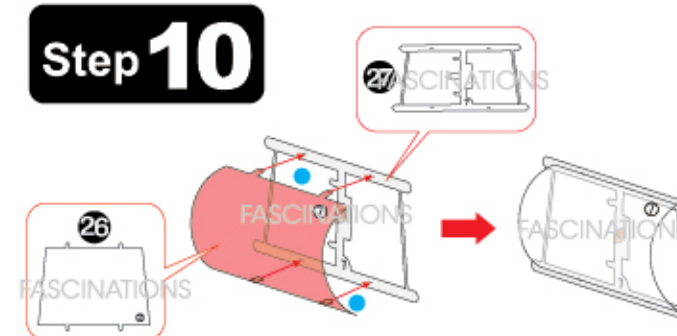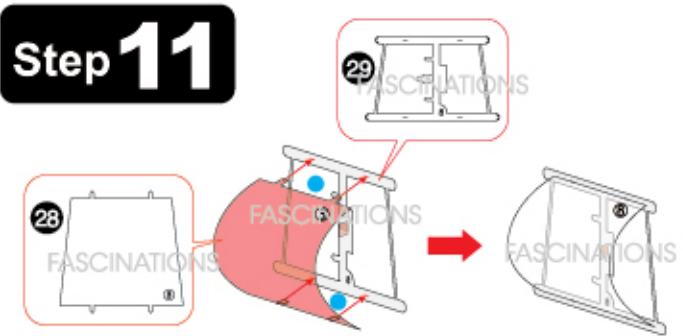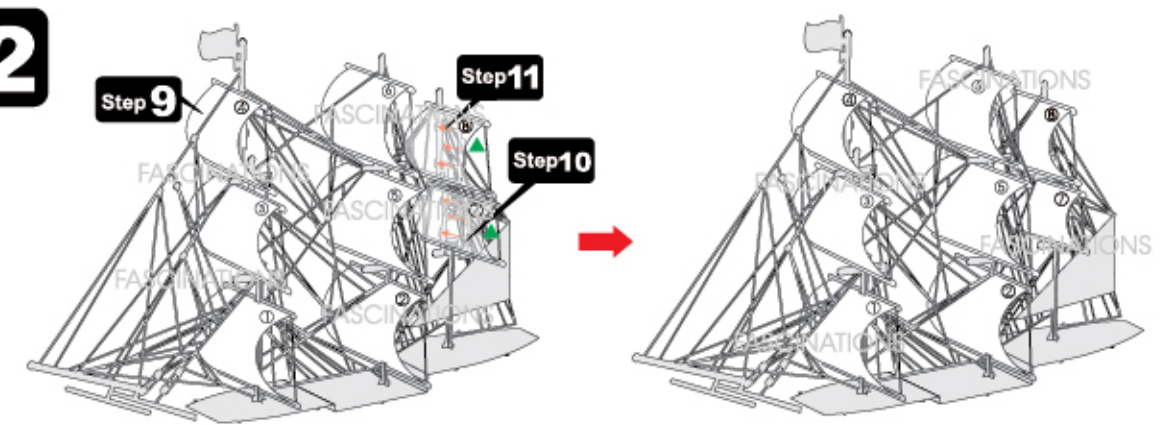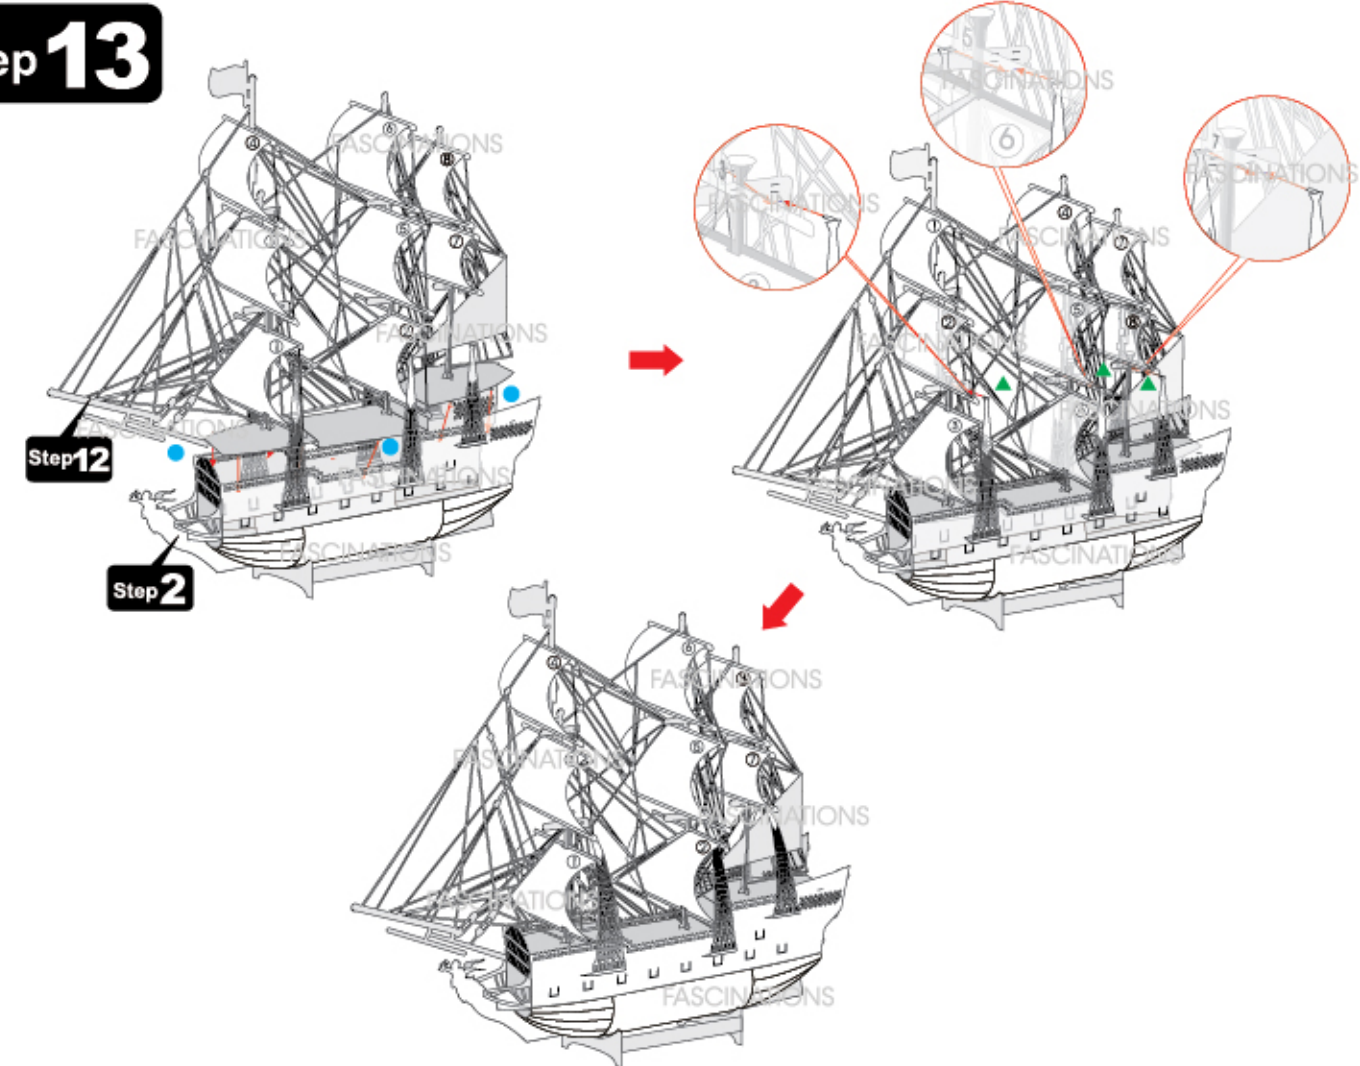Step 4**Step 5****Step 6****Step 7****Step 8****Step 9****Step 10****Step 11****Step 12****Step 13**



Step 14

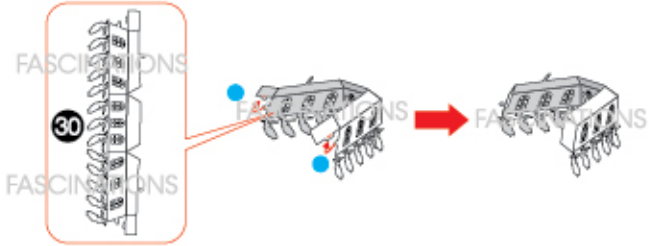

Step 15

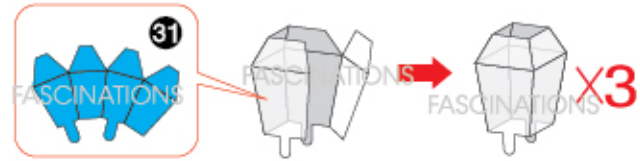

Step 16

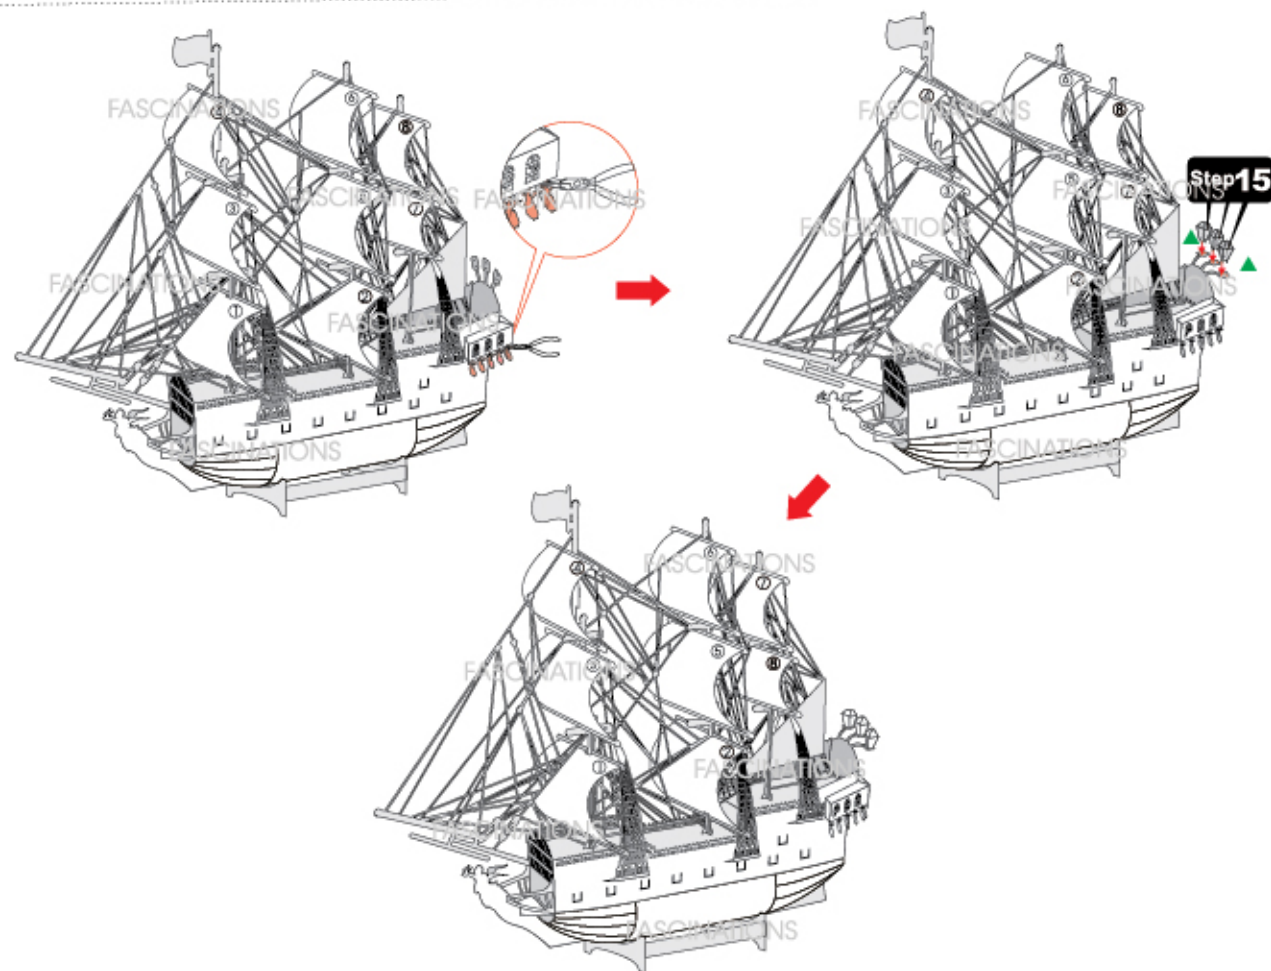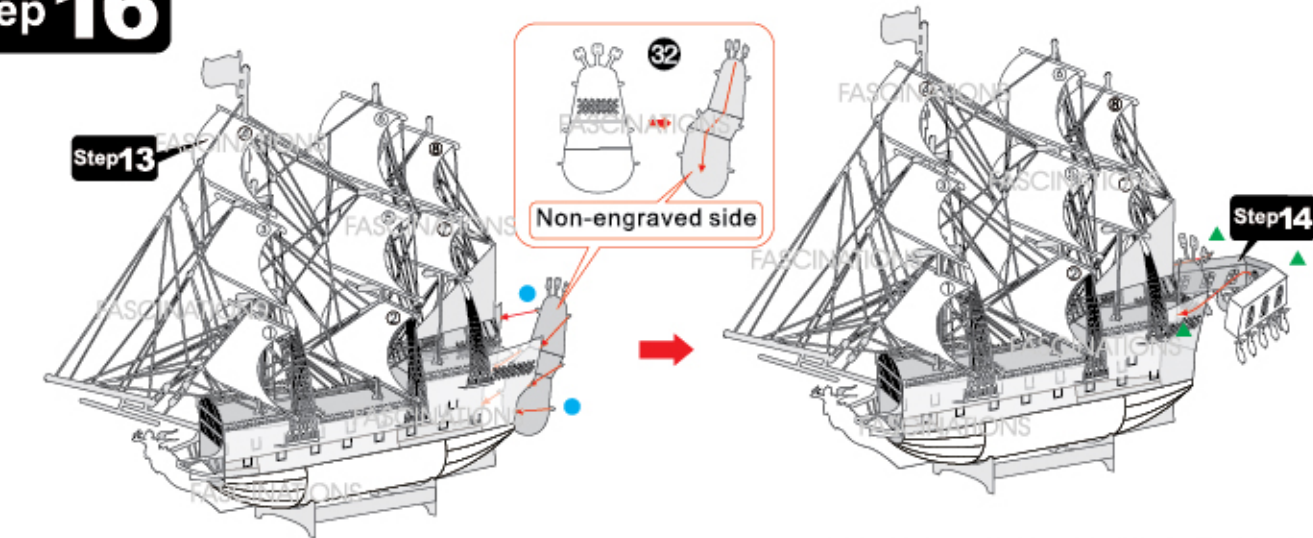

Step 17

